


Model 502 Assembly Instructions



1. Package Contents:
- Mechanical Scale
 - Stainless Steel Bowl
 - Weight Platter Mounting Plate

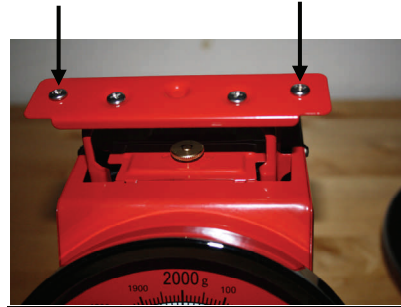


2. Remove Screws
- Remove the two mounting plate screws using a Phillips screw driver



3. Attach mounting plate
- Attach mounting plate to scale base. Gently push down on mounting plate to make sure mechanical arms are free for accurate weighing.



3. Place bowl on top of mounting plate
- Notice the scale is not at zero weight.

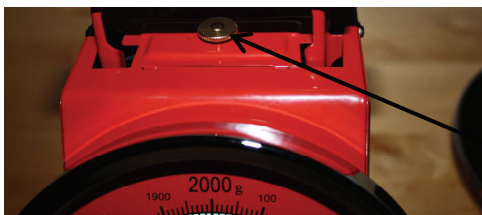

4. Adjust zero dial until the scale shows "0" weight



Your scale is now ready to use. Your stainless steel bowl should be washed by hand with mild detergent

Scalesco Measurement Technology Inc.

1200 Indus Street Suite A, Fairmont MN 56031
(Toll Free) 866-587-9773 (Phone) 507-238-9773 (Fax) 507-238-5447
(Web-site) <http://www.scales-co.com> (E-mail) sales@scales-co.com